 


# TEAC®

## CRX313i

### Alarm Clock Radio with Dock for iPod

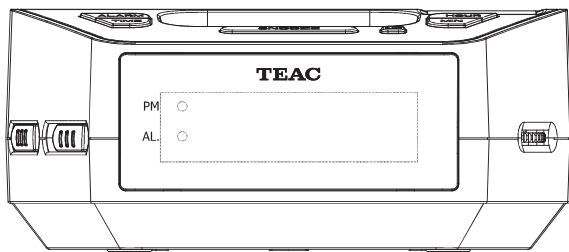

## USER MANUAL

# IMPORTANT!

WARRANTY INFORMATION INSIDE. PLEASE READ

Please read the owner's manual carefully and ensure that you have followed the correct installation and operating procedures.

1. Please read this warranty card.
2. Keep your purchase receipt to enable you to proceed quickly in the event of a Warranty Service.
3. If you require Warranty Service, please contact the TEAC Customer Support Hotline at 1300 553 315 for assistance. Please ensure that you have the model number, serial number and purchase receipt ready when you call.

Please complete the section below and keep this information for your own records.

Owner's Name

Owner's Address

Postcode

Model Name/No.

Serial No.

Dealer's Name

Dealer's Address

Postcode

### **Authorised Service Centres in Major Australian Cities**

**NSW**

151 Arthur Street  
Homebush West, NSW 2140

**Queensland**

Unit 1, 320 Curtin Ave West  
Eagle Farm, QLD 4009

**Western Australia**

Unit 2, 50 Pilbara Street  
Welshpool, WA 6106

**South Australia**

11 McInnes Street  
Ridleyton, SA 5008

**Victoria**

282 Normanby Road  
South Melbourne, VIC 3205

## **Thank you for selecting a TEAC product.**

If you should require assistance with your product regarding its setup or operation, or if any difficulties arise, please call us directly for advice between Monday to Friday at 8.30AM – 6PM AEST at the

**TEAC Customer Support Hotline**

# **1300 553 315**

[teacservicesupport@awa.com.au](mailto:teacservicesupport@awa.com.au)

[www.teac.com.au](http://www.teac.com.au)

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

#### Warranty Terms & Conditions

1. TEAC warrants that this product is free from defects in material and workmanship under normal domestic use with reasonable care and skill. Maintenance and cleaning (i.e. laser head) is not covered by this warranty. The TEAC warranty only applies to TEAC products purchased, used and serviced in Australia.
2. The benefits to the consumer given by this Warranty are in addition to other rights and remedies of the consumer under a law in relation to goods or services to which the warranty relates, being the Australian Consumer Law.
3. Refund or replacement via your retailer is available for a period of 14 days after purchase for goods that have been inspected and determined to have a major failure. Refund and exchange is not applicable for change of mind.
4. Subject to the terms herein, this warranty effectively covers the equipment as specified in the Warranty Periods Table below from the date of purchase.

TEAC PRODUCT	WARRANTY PERIOD
LED/LCD TV 32" (80 cm) and above	1 Year (In-Home Service/ Pick up Available)*
All other TEAC products	1 Year (Carry-in Service)

5. In Home Service/Pick up\* Service

This service will only be provided as part of this warranty if all the following conditions are met;

- a) The product is indicated in the Warranty Period Table.
- b) The product is within the warranty period.
- c) The product is located within the normal service area of the local TEAC Authorised Service Centre.

If TEAC determines that the product is not repairable on site, TEAC can complete the repair by taking the product to a TEAC Authorised Service Centre.

Carry-in Service

Where In-Home service/Pick up\* is not available, the purchaser is required to send the product to the nearest TEAC Authorised Service Centre for repair. In this event, proof of purchase is required to support a warranty claim. After the repair, the product will be available for collection by or return to the purchaser at a fee upon request. TEAC in-home service can be made available at a fee upon request.

6. A 12-month replacement warranty is applicable to all Accessories such as Remote, Power Adaptors and Cables.
7. TEAC will ensure to the best of its abilities that all required parts are made available for any required service/repair.
8. TEAC Australia Pty Ltd and its Authorised Service Centres will use their best endeavours to complete product repairs within a reasonable period based on available resources and workload during the time when service is requested and performed.
9. Refurbished parts may be used to repair the product. In the case of a replacement, the product may be replaced, with a refurbished unit of the same type or, if one is unavailable, a similar refurbished model with equal or better features & specifications.
10. Please be advised that if the product presented for repair is capable of retaining user-generated data, the data may be lost during servicing. Customers are strongly encouraged to back up all important information/data before sending the product in for service/repair.
11. Service will be provided only during normal business hours and under safety conditions and circumstances. TEAC and its authorised service agents can refuse any repair if safety, in relation to OH&S, becomes a concern to its staff or authorised service agents' personnel.
12. The warranty is void and warranty claims may be refused, subject to the Australian Consumer Law, if:
  - a) The product was not transported, installed, operated or maintained according to manufacturer instruction, or
  - b) The product was abused, damaged, tampered, altered or repaired by any unauthorised persons, or
  - c) Product failure is due to accidents during use, installation or transit, power surges, use of defective or incompatible external devices, exposure to abnormal conditions such as excessive temperatures or humidity, or entry of liquids, objects or creatures into the product.
13. No one is authorised to assume any liability on behalf of TEAC or impose any obligation on it, in connection with the sale of any equipment other than as stated in this warranty and outlined above.
14. TEAC reserves the right to inspect and verify whether the product is exhibiting a major failure as claimed by customers/retailers.
15. LCD dead pixel policy, please contact TEAC Customer Support Hotline on 1300 553 315 for assistance.

# IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
- 2.) Install this unit in accordance with the manufacturer's instructions.
- 3.) Only use attachments / accessories / replacement parts specified by the manufacturer.
- 4.) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the unit.
- 5.) When a cart is used, use caution when moving the cart/unit combination to avoid injury from tip-over.
- 6.) Do not install this unit near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 7.) The unit shall not be exposed to dripping or splashing water and no object filled with liquids, such as vases, shall be placed on the apparatus.
- 8.) Do not use this apparatus near water and clean the unit with dry cloth only.
- 9.) Disconnect the unit from the power source when cleaning.
- 10.) No naked flame sources, such as lighted candles, should be placed on the unit.
- 11.) Keep the player clean and never store it next to a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- 12.) Do not block any ventilation openings; the ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc. Give minimum 10cm distance around the apparatus for sufficient ventilation.
- 13.) To prevent fire or shock hazard, do not expose this unit to rain or moisture.
- 14.) Do not subject the product to harsh impacts. Do not drop the appliance. This may result in damage to the product and loss of data.
- 15.) Care is required with the use of this apparatus in tropical and/or moderate climates.
- 16.) Press the player's buttons gently. Pressing the buttons or the screen too hard can damage the unit.
- 17.) Do not use the player in an extremely dry environment, as this can lead to static discharge which can damage the player.
- 18.) If the unit experienced a crash due to a strong electromagnetic field or by other interference, please switch off the mains and disconnect unit from with the main power supply for a few minutes. Reconnect the unit with the power supply to reset the unit software, the unit will return to normal operation.
- 19.) To prevent fire or shock hazard, do not use this plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.
- 20.) Unplug this unit during lightning storms or when unused for long periods of time.
- 21.) Where the MAINS plug is used as the disconnect device, the disconnect device shall remain readily accessible.

- 22.) Do not destroy the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 23.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 24.) Do not overload wall outlet. Use only power source as indicated.
- 25.) Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
- 26.) Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, or has been dropped, does not operate normally.
- 27.) Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 28.) Attention should be drawn to the environmental aspects of battery disposal.
- 29.) This product is not intended for commercial use. Household use only.

## Before Setting Up the Unit

- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the power cord is properly installed.
- When moving the unit, be sure to first disconnect the AC power cord.
- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas.

## Unpacking and Setting Up

 
- Remove the product from the carton and remove all packing material from the unit. We suggest that you save the packing material, if possible, in the unlikely event that your unit ever needs to be returned for service. The original carton and packing material is the only safe way to pack your product to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Place your unit on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the FM antenna and extend it to its full length. It must be fully extended to provide the best FM reception.

## Protect Your Furniture

This model is equipped with non-skid rubber 'feet' at the bottom of the unit to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.


## Power Source

This product is designed to operate on normal 240V~50Hz AC power only. Do not attempt to operate the unit on any other power source. You could cause damage to the product that is not covered by your warranty.

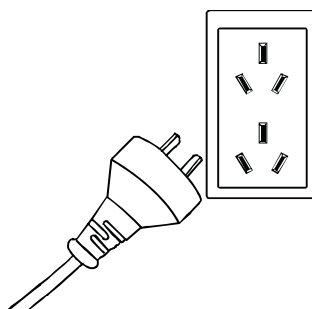


## OVERVIEW

 
### FRONT VIEW

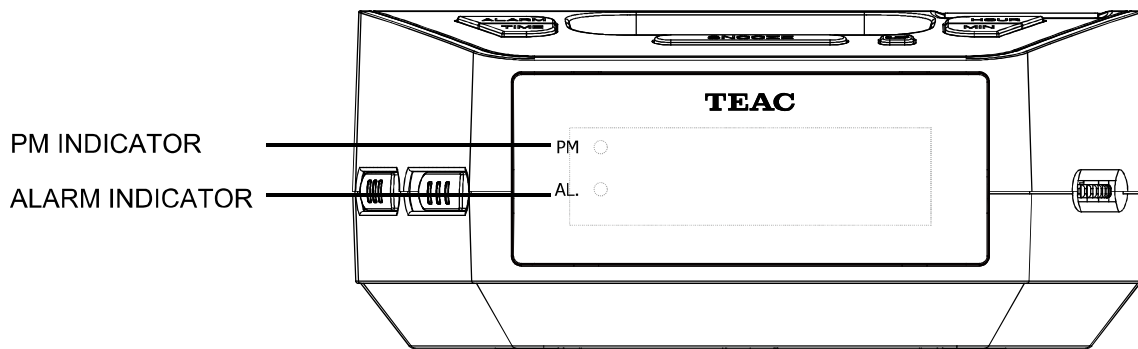




### TOP VIEW

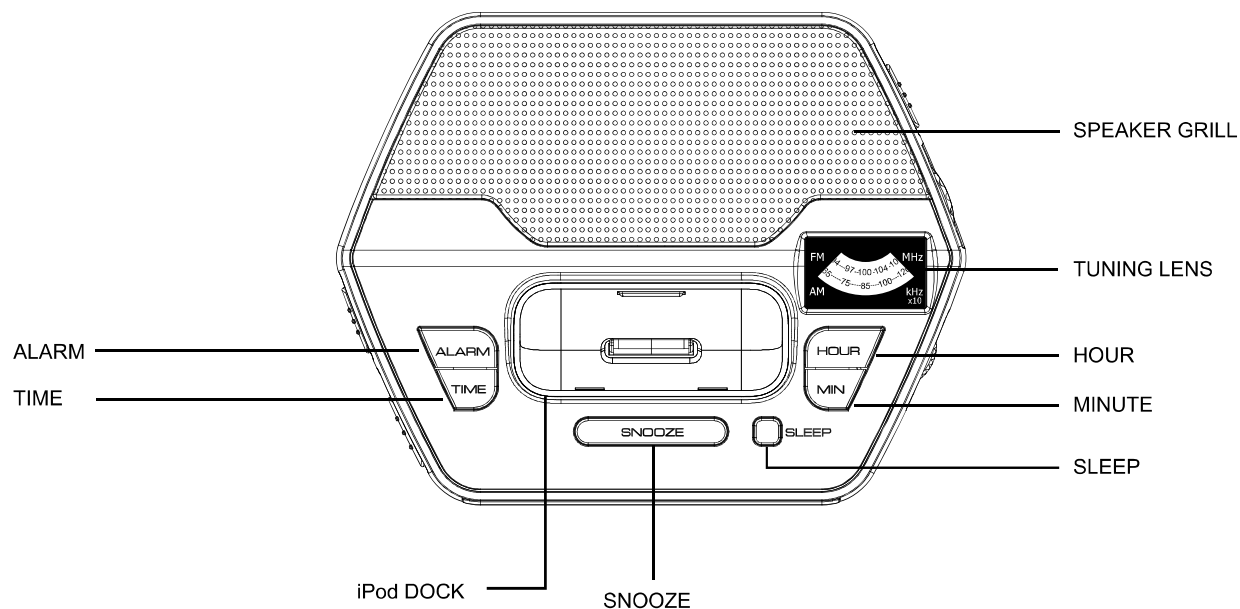 


### REAR VIEW

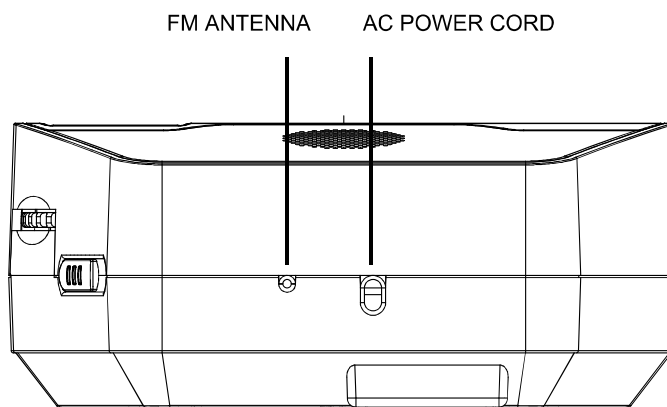 

## SIDE VIEW

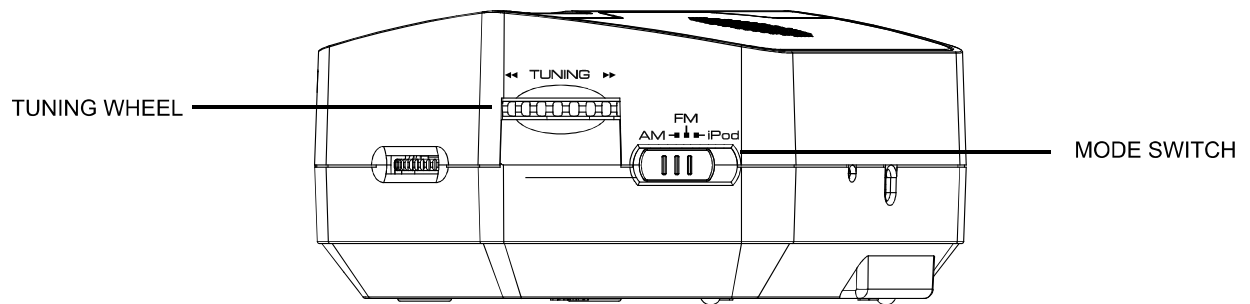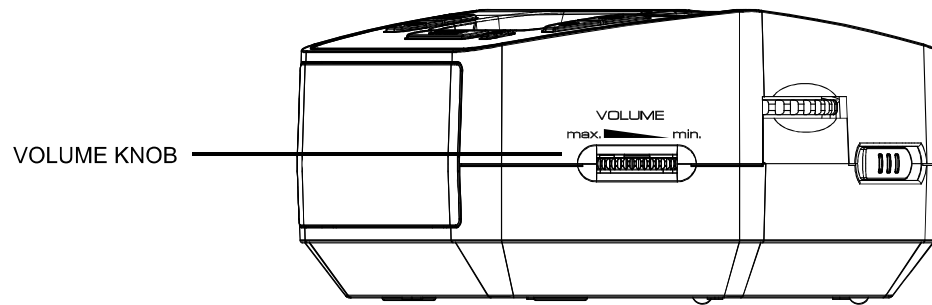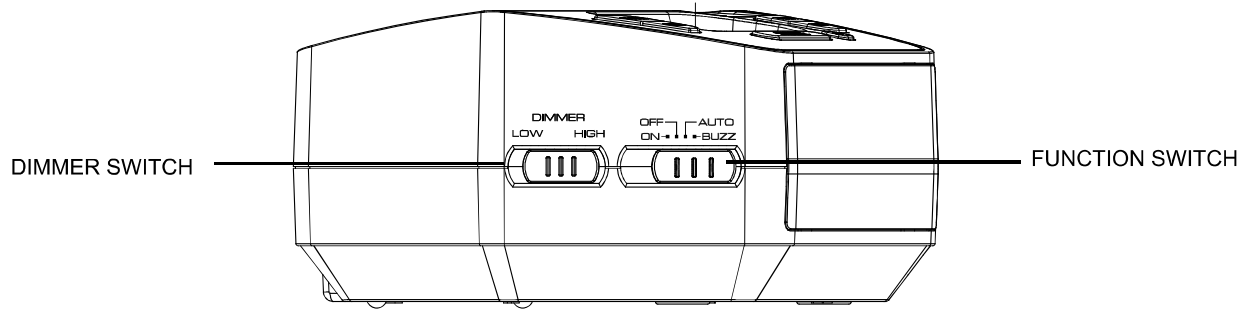   

## BOTTOM VIEW

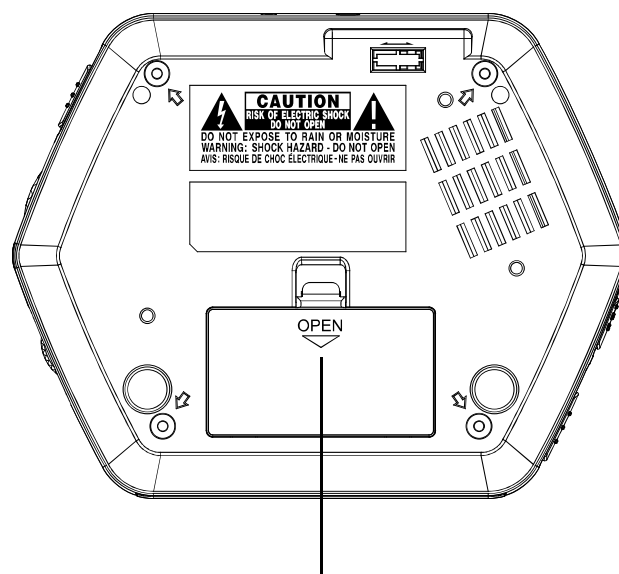 



## AC POWER SUPPLY CONNECTION

1. Check that rating label located at the bottom of the unit corresponds to your local power supply.
2. Make sure the wall socket is switched off, then plug the AC plug into the wall socket.
3. Switch on the wall socket.

### CAUTION:

The device is connected to the power with the AC plug. Disconnect the AC plug from the wall socket if you want to completely disconnect the device from the AC power. Make sure the power plug is easily accessible during operation and not hindered by other objects.

## DC BACKUP BATTERY

### Install Battery

1. Install 1 x 9V/6LR61 type battery (not included) into the back up battery compartment located at the bottom of the unit (Alkaline batteries are recommended for longer life time).
2. Make sure batteries follow the polarity markings, and then close the battery compartment cover.
3. If AC Power is cut off, the backup battery maintains the time settings.

## GENERAL FUNCTIONS

### Switching On and Off

1. The unit will automatically switch to standby mode once the AC power source is connected.
2. Switch on the device from standby mode by sliding the **FUNCTION** switch to **ON** position.
3. Switch the device to standby mode by sliding the **FUNCTION** switch to **OFF** position.
4. The display will show the time once the AC power source is connected.

### Selecting Play Mode

1. Switch the unit on by sliding the **FUNCTION** switch to **ON** position.
2. Select the play mode by sliding the **MODE** switch to either **AM / FM / iPod**.

### Adjusting the Volume

1. The volume can be adjusted by rotating the **VOLUME** knob located at the side of the unit.

### Setting Clock

1. Press and hold the **TIME** button and press the **HOUR** button to set the hour and press the **MIN** button to set the minute.
2. Release the buttons to confirm settings.

## Setting Alarm

1. Press and hold **ALARM** button on the unit and press the **HOUR** button to set the hour and press the **MIN** button to set the minute.
2. Release the buttons to confirm settings.
3. Slide the **FUNCTION** switch to **AUTO / BUZZ** to set the alarm.
4. Select **AUTO** mode to wake up by radio and select **BUZZ** mode to wake up by buzzer.
5. The **ALARM LED** will illuminate on the display once the alarm is set.
6. Slide the **MODE** button to select the wake-up mode.
7. When the alarm time is reached, depending upon your prior selection, the AM radio or FM or the buzzer will sound.
8. If the **iPod** is selected as the wake-up mode, the buzzer will sound.
9. Press **ALARM** button to cancel the alarm and the **ALARM LED** will remain on the display and the alarm will sound again on the next day at the same time.
10. Slide the **FUNCTION** switch to **ON / OFF** to cancel the alarm.

## Snooze Function

Press **SNOOZE** button to silence the **ALARM** sound (radio / buzzer) temporarily for approximately 9 minutes. The snooze function is repeatable for 119 minutes and will automatically stop, however the alarm remains set and activates again according to your alarm mode settings.

## Sleep Function

This function switches the unit from operation mode to **STANDBY** mode after the specified time. (Supports AM / FM mode only).

1. Press and hold the **SLEEP** button to turn the unit on and press **HOUR** and **MIN** buttons to set the sleep time.
2. The sleep time ranged from 1 minute to 1 hour 59 minutes.
3. Having set the sleep time, press **SLEEP** button to reset the sleep time to 59 minutes.
4. Press the **SNOOZE** button to cancel **SLEEP** function.

### Note:

Sleep function would not be able to turn off the iPod. In this case, once the sleep function is activated, the speaker of the unit will mute but the iPod will keep on playing.

## Dimmer Function

The brightness of the display can be controlled by sliding the **DIMMER** switch to HIGH / LOW position.

## TUNER MODE

### Radio Antenna

1. The FM antenna is located at the back of the unit. If FM is weak, extend the FM antenna to its full length or try varying the position and direction of the FM antenna until you find the strongest signal.
2. The AM bar antenna is built-in inside the unit. If AM reception is weak, change the position of the unit until the internal antenna picks up the strongest signal.

## Listening to Radio

1. Slide the **FUNCTION** switch to **ON** position.
2. Select **AM / FM** mode by sliding the **MODE** switch.
3. Tune to the desired radio station by rotating the **TUNING WHEEL**. The related frequency is displayed beneath the **TUNING LENS**.
4. To turn off the radio, slide the **FUNCTION** switch to **OFF** position to switch the unit into standby mode.

## iPod Mode

### iPod Universal Dock Adaptor

1. Select the iPod universal dock adaptor (not included, check your iPod packaging if it came with this adaptor) that fits with your iPod model.
2. Install the adaptor with the 2 tabs facing the front, by pushing it down in the universal dock on top of the unit.
3. To remove the adaptor, press its inside rear surface and pull it upward.

#### Note:

Make sure you use the correct adaptor for your iPod to prevent damage due to insecure iPod seating.

## Listen to iPod

1. With the correct iPod universal dock adaptor installed, gently dock the iPod into the unit's universal dock.
2. Depending upon your iPod, the battery will begin to charge when docked- **PLEASE REFER TO IPOD COMPATABILITY CHART ON PAGE 14**. For charging period, follow your iPod's instruction manual.
3. Slide the **FUNCTION** switch to **ON** position and slide the **MODE** switch to **IPOD** mode.
4. Control the iPod to playback music as mentioned in the iPod's instruction manual

#### NOTE:

This unit display cannot display any music information from your iPod. Please view the music information through your iPod display.

Charging your iPod while in AM radio mode is not recommended as it can interfere with the AM reception.

## Battery Precautions

1. Dispose of the old battery properly. Do not leave it lying around where a young child or pet could play with or swallow it. If the battery is swallowed, contact a physician immediately.
2. Battery may explode or leak if mistreated. Do not attempt to recharge it or disassemble it. Do not dispose of the old battery in a fire.

### Caution:

Incorrect replacement of the battery may cause it to explode or leak. Replace only with same or equivalent type.

## Cleaning and Maintenance

1. If the cabinet becomes dusty, wipe it with a soft cloth.
2. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth.
3. Never allow water or any liquid to get inside the cabinet.
4. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your unit.

## Information

### Troubleshooting

If a fault occurs, refer to this information before you take the device for repair. If you are unable to rectify the fault using the information given here, contact Customer Support for advice.

Under no circumstances should you attempt to repair the device yourself, as this would void the warranty.

PROBLEM	POSSIBLE CAUSE	REMEDY
No Sound	Volume is too low/Power cord incorrectly connected	Increase volume/Connect power cord correctly
The device does not respond to button commands	Static electrical discharge	Switch off the device, disconnect the power cable and plug it in again after a few seconds.
Poor radio reception	Weak radio signal  Interference from electrical devices such as televisions, video recorders, computers, neon lamps, etc.	Extend the FM antenna to its full length or try varying the position and direction of the FM antenna/Change the position of the unit until the internal antenna picks up the strongest signal/Relocate the unit

## Specifications

Power	AC240V 50Hz
AM	530 - 1600 kHz
FM	88 - 108 MHz
DC Backup	9V (6F22 9Vx1)
Power Consumption	13W
Measurement	160(L)X125(W)X71(H)mm
Weight	0.67 KG

 


 





 


This marking indicates that this product should not be disposed with other household wastes throughout Australia. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Design and specifications are subject to change without prior notice

Weight and dimensions are approximate

## Compatible iPods chart

	Model	Output	Charge
	iPod 4th Gen	Audio	Yes
	iPod 4th Gen Photo	Audio	Yes
	iPod 4th Gen Color	Audio	Yes
	iPod 5th Gen & iPod Classic	Audio	Yes
	Mini 1st & 2nd Gen	Audio	Yes
	Nano 1st & 2nd Gen	Audio	Yes
	Nano 3rd Gen	Audio	Yes
	Nano 4th Gen	Audio	Yes
	iPod Touch 1st Gen	Audio	Yes
	iPod Touch 2nd Gen	Audio	Yes



TEAC CUSTOMER SUPPORT HOTLINE (TCS)

1300 553 315

Between Monday to Friday – EST 9AM to 6PM